



PAK TURK

FOLDABLE SHOTGUN

INSTRUCTIONMANUAL

READ THE INSTRUCTIONS AND
WARNINGS IN THIS MANUAL
CAREFULLY BEFORE USING THIS
FIREARM



THANK YOU

THIS BOOKLET WILL GUIDE YOU THROUGH HANDLING YOUR FIREARM SAFELY PLEASE NOTE: CHANGES MAY BE MADE WITHOUT NOTICE

Your shotgun features an innovative and unique design. With regular care and cleaning, your firearm will serve you for a life time. The firearm was manufactured from high quality raw materials and with high-tech CNC machines in our factory.

Please read and understand all the directions and instructions in this Manual to guarantee the best performance and a safe shooting experience.

Maintain your firearm properly in accordance with these instructions so it will remain safe, and performs properly.

Always remember that you are using a firearm; always follow all safety rules and be aware that it is your responsibility to share your knowledge, and educate others in the safe use of this firearm.

Before firing a cartridge, learn the parts of your firearm and understand how it operates. Please read this manual carefully and enjoy your firearm safely.

MAINTENANCE INSTRUCTIONS:

1) NEVER MAKE CHANGES OR ALTERATIONS TO YOUR SHOTGUN

This shotgun was built to a proven and tested design, and manufactured with care. It must NEVER be altered or changed. Changing or altering any part of your shotgun may result in serious injuries to you or others, and is NOT RECOMMENDED by the manufacturer.

Any changes made to the shotgun or use of non-factory parts voids the factory warranty.

2) PROPER CARE AND STORAGE

Regular care and cleaning of your firearm is key to its proper functionality and reliability. ALWAYS make sure that the firearm is UNLOADED before you leave the range and check it again before you start the cleaning process.

THE RESPONSIBILITIES OF THE USER

The laws of your country give you the right to possess a hunting firearm. Appreciate and enjoy your rights with care. Be aware that, as an owner of a firearm, you are responsible for ensuring your own safety and that of your shooting partners, observers, and the environment.

DISCLAIMER

This firearm is sold with the understanding that the buyer will obey all applicable domestic laws, therefore Manufacturer/Importer/Dealer is not responsible for death or injuries caused by incorrect or irresponsible use.

MANUFACTURER DOES NOT ACCEPT ANY RESPONSIBILITIES FOR DAMAGE DUE TO THE FOLLOWING CAUSES:

- 1) INCORRECT OR IRRESPONSIBLE USE OF THE FIREARM
- 2) USE OF INCORRECT GAUGE AMMUNITION OR RELOADED, DAMAGED OR INPROPER CARTRIDGES
- 3) INSUFFICIENT AND/OR INCORRECT MAINTENANCE OR CLEANING WHICH CAUSES TO DAMAGE OR WEAR
- 4) SALE CONTRARY TO APPLICABLE LAWS AND REGULATIONS
- 5) CHANGING OR CONVERSION OF THE FIREARM'S ORIGINAL DESIGN, OPERATING MECHANISM, ACCESSORIES, MAGAZINES OR MECHANICALS
- 6) CARELESS, DANGEROUS OR CRIMINAL USE
- 7) USING THE FIREARM WITHOUT FIRST READING, UNDERSTANDING AND FOLLOWING ALL SAFETY RULES
- 8) ANY OTHER USE OR ACTION THAT IS BEYOND THE DIRECT CONTROL OF THE MANUFACTURER

IMPORTANT WARNING

- 1) Read the instructions booklet completely before using your firearm.
- 2) Always be aware of the handling and functional characteristics of your firearms.
- 3) Always unload your firearm when not in use (remove all cartridges). When stored or not in use, firearms should always be unloaded and move the safety lever to the WHITE position to block the trigger of your firearm. Always remove all cartridges and inspect the chamber to ensure your firearm is unloaded.

When stored or not in use, firearms should always be unloaded and move the safety lever to the WHITE position to block the trigger of your firearm. Always remove all cartridges and inspect the chamber to ensure your firearm is unloaded.

- 1) After shooting.
- 2) Before racking or after picking up the firearm.
- 3) Before putting the gun into its case.
- 4) Any time you are not using your firearm.
- 5) Before handing your gun to anyone else.

4) ALWAYS KEEP YOUR FIREARM POINTED IN A SAFE DIRECTION.

This ensures you do not injure yourself or anyone else.

5) ALWAYS STORE YOUR FIREARM OUT OF REACH OF CHILDREN OR OTHER UNAUTHORIZED PEOPLE.

many ways of keeping your firearms locked and stored safely and securely. Always secure your firearm in accordance with applicable laws in your area and always unload and then lock the firearm when not in use or whenever it will be unattended.

6) ALWAYS OBEY ALL LAWS REGARDING OWNERSHIP, TRANSPORT, AND SHOOTING YOUR FIREARM.

Never point your firearm at a person. Do not harm any person or damage any public property.

7) IF YOUR FIREARM DOES NOT FIRE AFTER PULLING THE TRIGGER: STOP, WAIT A MINUTE, AND USE EXTRA CAUTION WHEN OPENING THE BOLT.

If your firearm did not fire after pulling the trigger STOP! Keep the firearm pointed in a safe direction, apply the safety by moving the safety lever to the white position. Wait 60 seconds. Carefully open the bolt by pulling the cocking handle and eject the shell in a safe direction. Always remember when you experience a misfire, your firearm is still loaded and could fire at any time (a “hang fire”).

8) ALWAYS TREAT YOUR FIREARM AS IF IT IS LOADED, EVEN WHEN THE SAFETY IS ON.

Always keep your finger away from the trigger unless you are on target and prepared to shoot. Never forget that even with safety ON, you are responsible for the direction your firearm is pointing. Do not count on a mechanical device.

9) The firearm must never be altered. Manufacturer does not recommended the use of any spare parts or accessories and magazines other than those included. If you need magazines, spare parts or repair, contact our authorized distributor in your country.

10) ENSURE THE BARREL IS NOT PLUGGED OR OBSTRUCTED BEFORE YOU LOAD YOUR GUN.

The barrel should not have any residue from bore cleaning solvent or oil, or any other foreign material inside the bore, chamber or choke. If the barrel is blocked or otherwise obstructed, even partially, this may cause bulging and/or a breech explosion and/or a split barrel. If you feel a strange recoil or the report sounds unusually loud or soft **STOP SHOOTING IMMEDIATELY** and check the barrel for obstructions and bulges. **NEVER** try to clear an obstruction in your barrel by firing another shell! **ANY PARTIAL OR COMPLETE BORE OBSTRUCTION** can cause serious injury or death to the shooter or bystanders. The serial number is engraved on the firearm on several places. Every firearm has a unique number. This number is used for legal and warranty matters.

FOLDING SHOTGUN (PUMP ACTION/SEMI-AUTO)

FOLDING / UNFOLDING OF THE FIRE ARM

- 1) Check the surroundings and ALWAYS keep your firearm pointed in safe direction. BE SURE the fire arm is unloaded
- 2) Push the safety into ON position



- 3) Pull the forend/charging handle backwards and check the chamber and magazine tube is unloaded



4) While folding or unfolding your weapon do not put any item or part of anything between upper and lower receiver. Pull the receiver lock back for unfolding



5) You can fully fold unloaded gun and carry according to safety rules.



DISASSEMBLY OF THE FIREARM

- 1) Check the surroundings and ALWAYS keep your firearm pointed in safe direction. BE SURE the fire arm is unloaded
- 2) Remove the magazine cap.



- 3) Open the action slightly then push the barrel forward and out of the receiver.



- 3) Now you can remove the bolt group, by sliding it to the front.





PAK TURK



BE COURTEOUS

When shooting or hunting always acquire the permission of the landowner. Respect the land. Do not litter, use gates when possible, leave open and closed gates closed. Drive vehicles only where advance permission has been granted and always express gratitude for use of another person's land.

Offer your labour or game as repayment for the privilege of use. Remember you are helping develop a reputation for all sportsmen/sportswomen.

Mail Us

defence@pakturkarms.com

Address

Hamidiye Mahallesi, 40907.Sokak, No:1-A, Beysehir, konya